

Shift-I™ Quick Reference Guide

V1.0

FEATURES

Calibration Value	Press and hold both buttons, turn ignition on.
Setting Shift Points	Press and hold top button for upper set-point. Press and hold bottom button for lower set-point
Display Mode	Press up or down to cycle through modes
Brightness Adjustment	Press both buttons (all lights turn on), then use buttons to increase or decrease brightness.
RPM Set-Point Interval	Press and hold top button, turn ignition on.
Running in Battery Mode	Press and hold bottom button, turn ignition on.
Battery Voltage Calibration	Press and hold bottom button, turn ignition on. To add a 0.1V offset, press & hold the up button until you see a quick flash of the lights. To subtract 0.1V, use the bottom button.
System Reset	Press and hold both buttons, turn ignition on (keeping buttons pressed). A few seconds later, the lights will flash rapidly indicating reset and you can release the buttons.













Refer to the “Shift-I User Manual” for more information.

ADVANCED SETTINGS

Advanced Settings Menu → Press and hold both buttons, turn ignition on, then press and hold top button.

Change setting value...

Start here... chose the setting to change.

							
Startup Display 	Off	Shift Sequence	Shift Sequence then Battery (default)	Battery then Shift Sequence	-	-	-
Cruise Mode Timer 	30 Seconds	45 Seconds	60 Seconds (default)	90 Seconds	120 Seconds	-	-
RPM Hysteresis 	Off	6.25%	12.5%	25%	50%	Auto 350rpm or 25% (default)	
Over Voltage Warning 	Off	> 15.5V	16.0V (default)	> 16.5V	-	-	-
Sensitivity 	Minimum	(default)	Maximum

Refer to the “Advanced Settings Manual” for more information.

Make sure the RPM is below 2,200rpm to access the functions, and the correct calibration value has been used.